



# Aeon Labs MultiSensor Gen5

(Z-wave MultiSensor Gen5)



**Change history**

| Revision | Date       | Change Description        |
|----------|------------|---------------------------|
| 1        | 9/23/2014  | Initial.                  |
| 2        | 11/11/2014 | Added Mark CC and Hail CC |

**Aeon Labs MultiSensor Gen5  
Engineering Specifications and Advanced Functions for Developers  
(V1.02)**

Aeon Labs MultiSensor is a routing binary sensor device based on Z-Wave routing slave library V6.51.01.

The MultiSensor can be included and operated in any Z-wave network with other Z-wave certified devices from other manufacturers and/or other applications. All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network.

It also supports Security Command Class and has the AES-128 bit security encryption built right in. While a Security enabled Controller is needed in order to fully use the security feature.

If the MultiSensor is included into a SIS or SUC Z-wave network, it will be associated to SIS or SUC automatically.

If PIR motion sensor is triggered, the MultiSensor will send a Basic set (0xFF) to associated devices. The PIR motion sensor will then become inactive. After an interval time (configurable), the PIR motion sensor will wake up and can detect motion again. The Multisensor will send basic set (0x00) if the PIR motion sensor is not triggered for the interval time (configurable).

As soon as MultiSensor Gen5 is removed from a z-wave network it will restore itself into factory settings.

**1. Library and Command Classes**

**1.1 SDK:** 6.51.01

**1.2 Library**

- Basic Device Class: BASIC\_TYPE\_ROUTING\_SLAVE
- Generic Device class: GENERIC\_TYPE\_SENSOR\_NOTIFICATION
- Specific Device Class: SPECIFIC\_TYPE\_NOTIFICATION\_SENSOR

**1.3 Commands Class**

|                    | Included Non-Secure   | Included Secure   |
|--------------------|---|---|
| Node Info<br>Frame | COMMAND_CLASS_VERSION V2<br>COMMAND_CLASS_MANUFACTURER_SPECIFIC V2<br>COMMAND_CLASS_ZWAVEPLUS_INFO V2<br>COMMAND_CLASS_ASSOCIATION_GRP_INFO V1<br>COMMAND_CLASS_ASSOCIATION V2<br>COMMAND_CLASS_POWERLEVEL V1<br>COMMAND_CLASS_NOTIFICATION V3<br>COMMAND_CLASS_WAKE_UP V2<br>COMMAND_CLASS_BATTERY V1<br>COMMAND_CLASS_SENSOR_BINARY V1<br>COMMAND_CLASS_SENSOR_MULTILEVEL V5<br>COMMAND_CLASS_CONFIGURATION V1<br>COMMAND_CLASS_SECURITY V1<br>COMMAND_CLASS_FIRMWARE_UPDATE_MD V2<br>COMMAND_CLASS_MARK V1<br>COMMAND_CLASS_DEVICE_RESET_LOCALLY V1<br>COMMAND_CLASS_HAIL V1 | COMMAND_CLASS_ZWAVEPLUS_INFO V2<br>COMMAND_CLASS_VERSION V2<br>COMMAND_CLASS_WAKE_UP V2<br>COMMAND_CLASS_MANUFACTURER_SPECIFIC V2<br>COMMAND_CLASS_SECURITY V1<br>COMMAND_CLASS_MARK V1<br>COMMAND_CLASS_DEVICE_RESET_LOCALLY V1<br>COMMAND_CLASS_HAIL V1 |

|   |   |  |
|---|---|--|
| Security Command Supported Report Frame | - | COMMAND_CLASS_ASSOCIATION_GRP_INFO V1<br>COMMAND_CLASS_ASSOCIATION V2<br>COMMAND_CLASS_POWERLEVEL V1<br>COMMAND_CLASS_NOTIFICATION V3<br>COMMAND_CLASS_BATTERY V1<br>COMMAND_CLASS_SENSOR_BINARY V1<br>COMMAND_CLASS_SENSOR_MULTILEVEL V5<br>COMMAND_CLASS_CONFIGURATION V1<br>COMMAND_CLASS_FIRMWARE_UPDATE_MD V2 |
|---|---|--|

## 2. Technical Specifications


**Operating distance:** Up to 600 feet/150 meters outdoors.

**Operating temperature:** -10°C to 60°C.

**Relative humidity:** 8-80%

## 3. Familiarize Yourself with Your MultiSensor Gen5

### 3.1 Interface

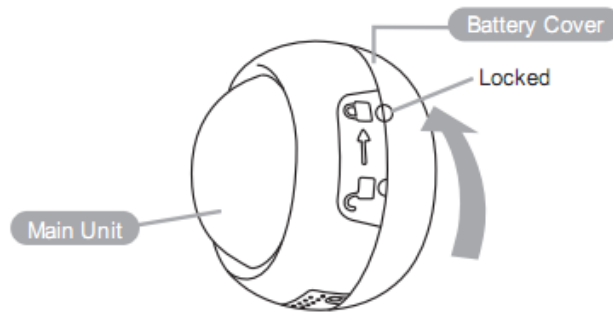

## 4. All Functions of Each Trigger

### 4.1 Function of Z-Wave Button

| Trigger        | Description  |
|----------------|--|
| Click one time | <p><b>Add MultiSensor Gen5 into z-wave network:</b></p> <ol style="list-style-type: none"> <li>1. Power on MultiSensor. The MultiSensor's LED will blink slowly when you short press the Z-Wave Button.</li> <li>2. Let the primary controller into inclusion mode (If you don't know how to do this, refer to its manual).</li> <li>3. Press the Z-Wave button.</li> <li>4. If the inclusion is success, MultiSensor Gen5's LED will be kept turning on for 3 seconds when you short press the Z-Wave Button. If the LED is still in slow blink, in which you need to repeat the process from step 2.</li> </ol> <p><b>Remove MultiSensor Gen5 from Z-wave network:</b></p> <ol style="list-style-type: none"> <li>1. Power on MultiSensor. The MultiSensor's LED will be kept turning on for 3 seconds when you short press the Z-Wave Button.</li> <li>2. Let the primary controller into exclusion mode (If you don't know how to do this, refer to its manual).</li> <li>3. Press the Z-Wave button.</li> <li>4. If the exclusion is success, MultiSensor Gen5's LED will blink slowly when you short press the Z-Wave Button. If MultiSensor Gen5's LED still keeps on status, in which you</li> </ol> |

|                           |   |
|---------------------------|---|
|                           | need to repeat the process from step 2.   |
| Press and hold 3 seconds  | Send Wake Up Notification (when it is in battery power)   |
| Press and hold 20 seconds | <p><b>Reset MultiSensor Gen5 to factory Default:</b></p> <ol style="list-style-type: none"> <li>1. Press and hold the Learn button for 20 seconds.</li> <li>2. If holding time more than one second, the LED will blink faster and faster. If holding time more than 20 seconds, the LED will be on for 2 seconds, it indicates reset is success, otherwise please repeat step 2.</li> </ol> <p><b>Note:</b></p> <ol style="list-style-type: none"> <li>1, This procedure should only be used when the primary controller is inoperable.</li> <li>2, Reset MultiSensor Gen5 to factory default settings, it will: <ol style="list-style-type: none"> <li>a ), let the MultiSensor Gen5 to be excluded in Z-Wave network;</li> <li>b), delete the Association setting, power measure value, Scene Configuration settings;</li> <li>c), restore the Configuration settings to the default.</li> </ol> </li> </ol> |

## 5. Special Rule of Each Command

### 5.1 Z-Wave Plus Info Report Command Class

| Parameter           | Value  |
|---------------------|--|
| Z-Wave Plus Version | 1  |
| Role Type           | 6(ZWAVEPLUS_INFO_REPORT_ROLE_TYPE_SLAVE_ALWAYS_ON) |
| Node Type           | 0 (ZWAVEPLUS_INFO_REPORT_NODE_TYPE_ZWAVEPLUS_NODE) |
| Installer Icon Type | 0x0C07 (ICON_TYPE_GENERIC_SENSOR_NOTIFICATION)     |
| User Icon Type      | 0x0C07 (ICON_TYPE_GENERIC_SENSOR_NOTIFICATION)     |

### 5.2 Association Command Class

The MultiSensor Gen5 supports 1 Association group.

Group 1 is assigned to the Lifeline association group and every device has 5 nodes to associate.

When the PIR motion sensor is triggered, the MultiSensor will send Basic Set (0xFF) to the associated nodes. If no any PIR motion on an interval time (configurable), the MultiSensor will send Basic Set (0x00) to the associated nodes.

The automatically report of temperature, humidity and luminance (configurable) also can be sent to associated nodes.

### 5.3 Association Group Info Command Class

#### 5.3.1 Association Group Info Report Command Class

Profile: General: NA (Profile MSB=0, Profile LSB=0)

#### 5.3.2 Association Group Name Report Command Class

Group 1: Lifeline

### 5.6 Configuration Set Command Class

|   |          |   |   |   |   |      |   |
|---|----------|---|---|---|---|------|---|
| 7   | 6        | 5 | 4 | 3 | 2 | 1    | 0 |
| Command Class = COMMAND_CLASS_CONFIGURATION |          |   |   |   |   |      |   |
| Command = CONFIGURATION_SET                 |          |   |   |   |   |      |   |
| Parameter Number                            |          |   |   |   |   |      |   |
| Default                                     | Reserved |   |   |   |   | Size |   |
| Configuration Value 1(MSB)                  |          |   |   |   |   |      |   |
| Configuration Value 2                       |          |   |   |   |   |      |   |
| .....                                       |          |   |   |   |   |      |   |
| Configuration Value n(LSB)                  |          |   |   |   |   |      |   |

Parameter Number Definitions (8 bit):

| Parameter Number<br>Hex /<br>Decimal | Description  | Default Value | Size |
|--------------------------------------|--|---------------|------|
| 0x02(2)                              | Enable/Disable waking up for 10 minutes when re-power on (battery mode) the MultiSensor.<br>1. Value = 0, disable.<br>2. Value =others, enable.  | 0             | 1    |
| 0x03 (3)                             | 1. The default PIR time is 4 minutes. The Multisensor will send BASIC SET CC (0x00) to the associated nodes if no motion is triggered again in 4 minutes.<br>2. Range: 1~15300.<br><b>Note:</b><br>(1), The time unit is second if the value range is in 1 to 255.<br>(2), If the value range is in 256 to 15300, the time unit will be minute and its value should follow the below rules:<br>a), Interval time =Value/60, if the interval time can be divided by 60 and without remainder.<br>b), Interval time= (Value/60) +1, if the interval time can be divided by 60 and has remainder.<br>(3), Other values will be ignored. | 240           | 2    |
| 0x04(4)                              | Enable/disable the function of motion sensor.<br>1. Value=0, disable.<br>2. Value=1, enable.   | 1             | 1    |
| 0x05(5)                              | Which command would be sent when the motion sensor triggered.<br>1. Value=1, send Basic Set CC.<br>2. Value=2, send Sensor Binary Report CC.   | 1             | 1    |

|            |  |                  |   |
|------------|--|------------------|---|
| 0x28(40)   | Enable/disable the selective reporting only when measurements reach a certain threshold or percentage set in 41-44 below. This is used to reduce network traffic. (0 == disable, 1 == enable)  | 0                | 1 |
| 0x29(41)   | Threshold change in temperature to induce an automatic report.<br><b>Note:</b><br>1. When the unit is Celsius, threshold=Value.<br>2. When the unit is Fahrenheit, threshold=Value*1.8.<br>The accuracy is 0.1.<br>3. The high byte is the part of integer, the low byte is the fractional part.   | 0x0100 (1%)      | 2 |
| 0x2A(42)   | Threshold change in humidity to induce an automatic report.<br><b>Note:</b><br>The accuracy is 0.1.<br>The high byte is the part of integer, the low byte is the fractional part.  | 0x0500 (5.0% RH) | 2 |
| 0x2B(43)   | Threshold change in luminance to induce an automatic report.   | 0x6400 (100 LUX) | 2 |
| 0x2C(44)   | Threshold change in battery level to induce an automatic report.<br><b>Note:</b><br>The accuracy is 0.1.<br>The high byte is the part of integer, the low byte is the fractional part.   | 0x0500 (5.0%)    | 2 |
| 0x2E(46)   | 1.Enable/disable to send the alarm report of low temperature(<-15°C)<br>2. Value=1, enable (The MultiSensor will report the Multi Level Temperature CC with the value=0xFFFF to controller if the current temperature is less than -15°C).<br><b>Note:</b> The battery activity will be reduced at low temperatures (-15 degrees Celsius and below), which will lead to the product may not work normally. It is recommended to use USB power at low temperatures. | 0                | 1 |
| 0x65 (101) | Which report needs to be sent in Report group 1 (See flags in table below).  | 225              | 4 |
| 0x66 (102) | Which report needs to be sent in Report group 2 (See flags in table below).  | 0                | 4 |
| 0x67 (103) | Which report needs to be sent in Report group 3 (See flags in table below).  | 0                | 4 |

|            |   |                |   |
|------------|---|----------------|---|
| 0x6F (111) | The interval time of sending reports in Report group 1 (Valid values 0x05-0x28DE80).<br><b>Note:</b> the unit of interval time is second. | 1800 (seconds) | 4 |
| 0x70 (112) | The interval time of sending reports in Report group 2 (Valid values 0x05-0x28DE80).<br><b>Note:</b> the unit of interval time is second. | 1800 (seconds) | 4 |
| 0x71 (113) | The interval time of sending reports in Report group 3 (Valid values 0x05-0x28DE80).<br><b>Note:</b> the unit of interval time is second. | 1800 (seconds) | 4 |
| 0xFC (252) | Enable/disable Configuration Locked (0 =disable, 1 = enable).   | 0              | 1 |
| 0xFF (255) | 1.Value=0x55555555、 Default=1、 Size=4<br><br>Reset to factory default setting and removed from the z-wave network                         | N/A            | 4 |
|            | 2.Reset to factory default setting  | N/A            | 1 |

Configuration Values for Parameter 101-103:

|                            | 7         | 6        | 5           | 4        | 3        | 2        | 1        | 0       |
|----------------------------|-----------|----------|-------------|----------|----------|----------|----------|---------|
| configuration Value 1(MSB) | Reserved  |          |             |          |          |          |          |         |
| configuration Value 2      | Reserved  |          |             |          |          |          |          |         |
| configuration Value 3      | Reserved  |          |             |          |          |          |          |         |
| configuration Value 4(LSB) | Luminance | Humidity | Temperature | Reserved | Reserved | Reserved | Reserved | Battery |

- Reserved

Reserved bits or bytes must be set to zero.